

RODGERS® Hymnplayer

QUICK GUIDE

1. Select hymn from Hymnal*

307 In Our Lovely Deseret

Brightly ♩ = 84-100


1. In our love - ly Des - er - et, Where the Saint
2. That the chil - dren may live long And be beat

2. Press and release "Hymn Player"



* note: not all hymns from Hymnal are in the Hymnplayer.

3. Select hymn in the green window by rotating dial

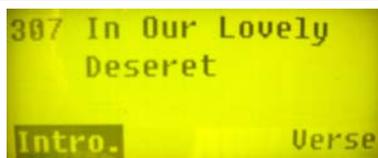

or { by holding "Hymn Player" while pressing Numbers
note: "10" can be used as "0" for the Hymnplayer.



4. Press to play introduction



5. Press to play hymn



6. To change volume during play, rotate dial



To return organ to normal operation, repeatedly press the "0" button until TRANSPOSER 0 appears in the green window.

The "0" button is located below the lower keyboard to the extreme right.



START THE HYMN PLAYER




Press and release the **HYMN PLAYER** button to activate the hymn player function. Rotate the **LARGE DIAL** located to the right of the keyboards to select a hymn **OR** press and hold the **HYMN PLAYER** button and enter the hymn number by pressing any of the numbered buttons beneath the keyboards. The number and name of the selected hymn will appear in the display window. **Intro** will be highlighted in the display window.

PLAYING A HYMN



Press and release the **PLAY** button. An introduction will play for the selected hymn. When the introduction has finished, press **PLAY** again and the verse will begin. At the conclusion of each verse simply press **PLAY** again to hear as many additional verses as desired.

If **NO** introduction to the hymn is desired, turn the **SMALL KNOB** located to the right of the large dial and highlight **Verse** in the lower right corner of the display window. Press **PLAY** and the hymn will play the verse only.

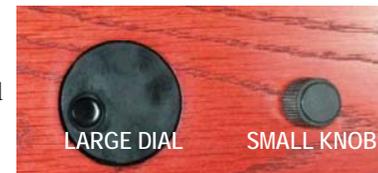

TO ADJUST TEMPO OR VOLUME

During playback the volume and tempo can be adjusted. **Volume:** Rotate the **LARGE DIAL** to increase or decrease the volume. The volume level is highlighted in the display. **Tempo:** Turn the **SMALL KNOB** to highlight the tempo. Rotate the **LARGE DIAL** to increase or decrease tempo. Note: tempo and volume may be preset **PRIOR** to playing the hymn. Press and release the **QUICK MENU** button located to the far left of the numbered buttons beneath the top keyboard. Look at the green window. Rotate the **SMALL KNOB** to select tempo or volume.



Make your desired adjustments by rotating the large dial, then press **PLAY**.

PRELUDE PLAY



Press and release the **PRELUDE** button. (Optional: to begin the Prelude with a different selection, turn the **LARGE DIAL**.) Press **PLAY** to start. Factory selected hymns will play continuously. To end the Prelude, press the **STOP** button.



The volume of the Prelude selections can be set to play quieter than the Hymnplayer: rotate the **SMALL KNOB** to select volume. Rotate the large dial to a desired volume level. To save this setting as default: when the Prelude volume setting is displayed in the window, hold the **SET** button and press **0** momentarily until the green window shows a "saved" message.

TO CHANGE HYMNBOOK LANGUAGE

Press and release **HYMN PLAYER** then press and release **QUICK MENU**. Rotate the **LARGE DIAL** to change the hymnbook language. The hymn numbers correspond to the selected hymnbook. To save this choice as the organ's default hymnal: while this selection is displayed in the window, hold the **SET** button and press **0** momentarily until the green window shows a "saved" message.

RODGERS®

For more help, call your Rodgers dealer or visit www.rodgersinstruments.com

PN 1905590

For more information, see reverse side.